



COM SEL (JB9) Settings:
 - for normal operation, jumper 1 to 2, and 5 to 6
 - for XBee-to-9S12G communication, jumper 2 to 4, and 3 to 5
 - for XBee-to-host connection, jumper 1 to 3, and 4 to 6

NOTE: By installing a suitable header for J10, an ADXB adapter may be plugged into J10, supporting the use of an XBee RF module

www.technologicalarts.com
 support@technologicalarts.com sales@technologicalarts.com

Technological Arts, Inc.

EsduinoXtreme 9S12G MCU Module

Size B	Document Number	Rev 1
FILE: esd-x1.dsn		
Date:	Tuesday, December 09, 2014	Sheet 1 of 1